

Ver 1.1



FLIPPER

Owner's Manual

LENGTH 25"
WIDTH: 16.375"
HEIGHT: 54"



Contents

1x SqwishLand Flipper Machine



4x Sets of Keys (2 sets of #1 and 2 sets of #2)



1x Remote for the Screen (*NOTE:REMOTE INSIDE BOX FOR SCREEN*)



2x Legs



1x Front Plate



1x Back Plate



2x Locking Brackets



1X Bag of Hardware (12x 10mm Bolts + 4 Screws)



Tools Needed

1. 10mm + 7mm Wrench or Socket
2. Philips/Cross-head Screwdriver



How to Assemble

1. Start with attaching the front plate and the back plate to the legs
Use the 4 screws for the Front Plate for everything else in this manual use the 10mm Bolt



Note: The Back plate connects to the side with the wheels

2. Stand the machine up now and place the Flipper Machine right on top of the legs



3. Now attach the 2 Locking brackets they will take up the remaining (x8) 10mm Bolts.
To do this attach the brackets from underneath and bolt them into the Flipper Machine



(NOTE: Slide the Flipper into place so the locking brackets fit between the legs)



4. Congratulations! Your new SquishLand Flipper is now assembled!

Flipper Setup Tips

1. We recommend raising the back legs (wheel side) to help the capsules roll smoothly and to keep the wheels off the ground. To do this simply rotate the back pegs till they elevate the wheels off the ground.



How the Machine Works

1. When a customer vends a capsule, they automatically get one toy capsule.




2. Another capsule enters the playfield you can now play for a chance to get a 2nd capsule.



3. If the capsule lands in the goal it is vended



4. However, if it drops into one of the holes the capsule is lost and drops into the capsule catch where it can be added back to the vend chutes.

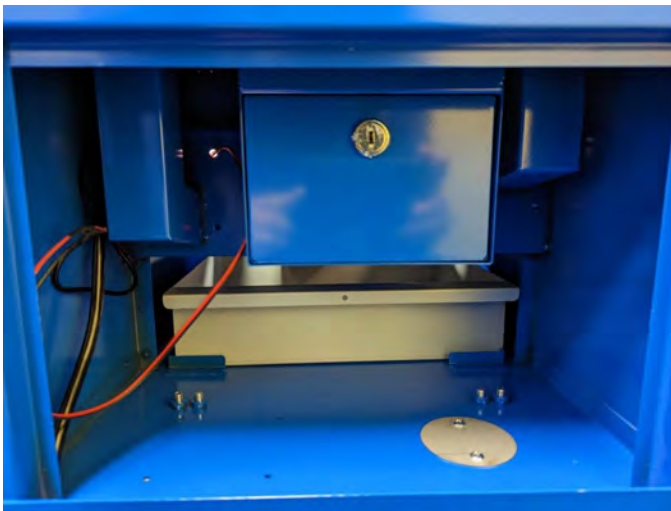

Opening the Flipper Machine

1. There are two sets of keys to open the Flipper Machine



SET #1 Opens the Toy Chutes and Back of the Monitor

SET #2 Used for removing the coin mech and the cash drawer/capsule catch



Filling the Flipper with Capsules

1. Open the top section on the back using a **Set of #1 Keys**



2. Now you can clearly see the 2 chutes for SqwishLand Capsules.
One side is the actual vend the other side is the capsule that enters the playfield.
Those capsules if not won end up in the capsule catch and need to be brought back up and dumped into these chutes.



Emptying the Cash Drawer

1. First remove the security bar on the bottom section of the back



NOTE: THIS BOLT IS STANDARD FEEL FREE TO ADD YOUR OWN PADLOCK HERE FOR SECURITY

2. Open the bottom section on the back using a **Set of #2 Keys** and locate the cash drawer

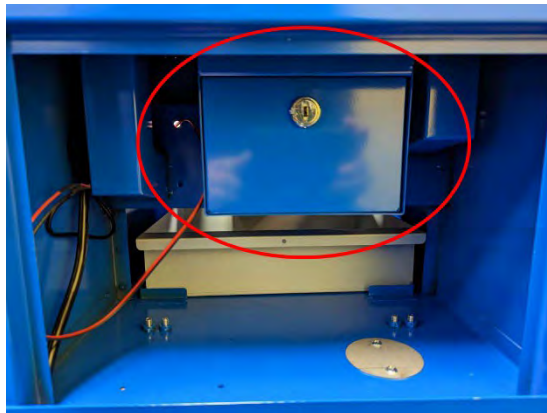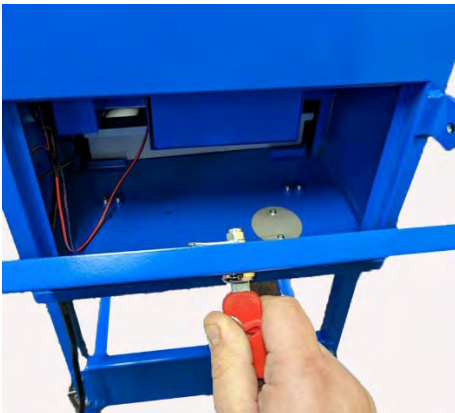

3. Open the Cash Drawer and collect your coins and now you close it all up!




Removing the Capsules from the Capsule Catch

1. First remove the security bar on the bottom section of the back



2. Open the bottom section on the back using a **Set of #2 Keys**

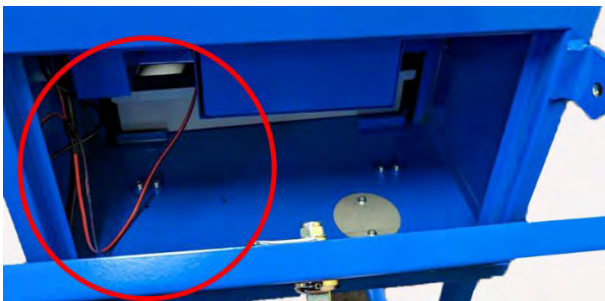

NOTE: When removing be careful of pulling on any cords that may be showing here. These are low voltage cables for the LED's

3. Now you can remove the large capsule catch it just slides right out.



4. This is the capsule catch that holds any capsules not won on the playfield you can insert these capsules back up to the top section with the capsule chutes



NOTE: There are two power supplies in the top section of the machine. One is for the monitor, and one is for the LED's. The machine doesn't require power to run just to power the video and LED's

Removing the Coin Mech

1. Using a Set of #2 Keys simply pop the entire coin mech and plate off with the key



NOTE: Sometimes the plexiglass can be a little snug around the coin mech plate but with a little force it should pop right out. If its snug gently tap it with a rubber mallet to pop it back in.

Installing the USB Drive for Video Content

1. Open the top section on the back using a Set of #1 Keys



2. Now simply plug the USB with MP4 video right into the back of the video monitor it should automatically begin playing the video



Replacing the monitor

1. Open the top section on the back using a **Set of #1 Keys**



2. Make sure to unplug the monitor's power supply and remove the USB drive



3. Using a 7 mm socket wrench unscrew these 3 nuts on the front of the machine. We need to remove this trim because we will be pulling the monitor through the front of the machine.



4. Using a 7 mm socket wrench unscrew these 4 nuts on the back of the monitor




5. ***Note: Be careful to not pull on the metal plate to hard or you may crack the bottom plexiglass.***

We are not trying to remove the metal plate we only want to create enough slack to pull it through the front of the machine.



6. Slip the new monitor in the same way and now close it all up and plug in the monitor's power supply and USB Drive and we are good to go!

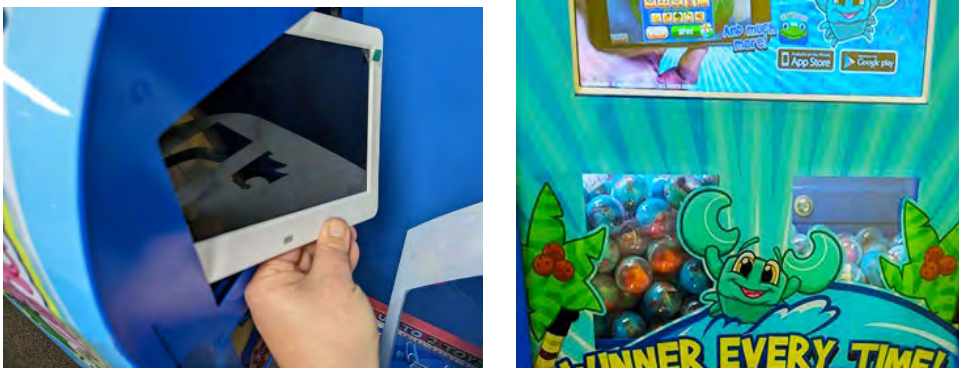

Fixing a capsule jam

Sometimes when loading the capsules into the machine there may be a foreign piece of debris or a bad or damaged capsule gets put into the machine it can sometimes create a jam where the capsules aren't vending properly. We need to open the front to access the situation.

1. Using a 7 mm socket wrench unscrew these 3 nuts on the front of the machine.



2. Now we can pull back on the trim leaving us enough room to remove the plexiglass. The plexiglass is one solid piece so lift it straight up to remove it safely



3. Grab the playfield by the two handles and lift it straight up.



NOTE: The playfield is connected to a wire be careful to NOT remove it beyond the slack given.



4. You can access the situation and see what is creating the jam. Free the jam and make sure the chute is clean and free of debris.



NOTE: The playfield's cord has enough slack so you can remove the playfield however if the slack is NOT pulled thru the back end the cord can create a jam of the capsules.

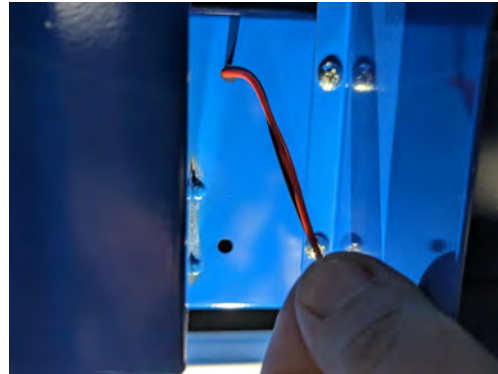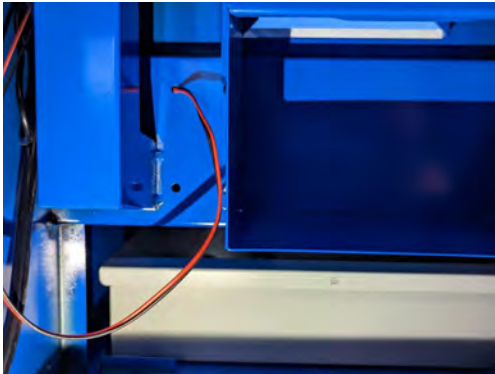

5. Close the machine up and test that its now vending properly.

Need to order more 1" SqwishLand Capsules?

- Call us 800-967-3048
- Email us sjochim@brandvendingproducts.com or craig@brandvendingproducts.com
- Visit us online <https://www.brandvendingproducts.com/>
- Visit us in person 2610 E Mohawk Ln #120, Phoenix, AZ 85050
- We're here to help!



Product Information

- 10 cute and loveable Sea characters
- The Original Soft n' Squishy™ Collectible Toy
- Over 90 Sea varieties to collect
- The Best-Selling 1" Vending Toy 10 years in a row
- Bonus game code in select capsules
- Space saving perfectly round capsules
- Eye-catching and vibrant multi-colored capsules

ORDER QUANTITY: 1 bag of 250 capsules

Choose an option

Choose an option

1

ADD TO CART

Add to Wishlist

SKU: BNSLSEA1CP

Categories: 1" Toy Capsules, All, SqwishLand Sea

Did the screen go out?

**Don't worry we got you this emergency replacement
screen cover while we get the screen replaced
FYI Flipper still works even without the screen**

